
Quasonix

TRANSMITTER PINOUT CODE 88

Connector: Female MDM-15

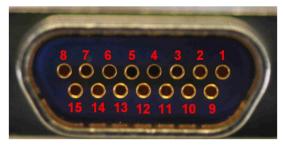

| Pin | Function | | |
|-----|---|--|--|
| 1 | DC Power In | | |
| 2 | DC Power Return | | |
| 3 | TTL Clock and Data Ground | | |
| 4 | Clock In (Differential Positive or TTL) | | |
| 5 | Data In (Differential Positive or TTL) | | |
| 6 | Serial Control Ground | | |
| 7 | RF On/Off | | |
| 8 | Serial Control Reply from Transmitter | | |
| 9 | DC Power In | | |
| 10 | DC Power Return | | |
| 11 | Preset Bit 0 | | |
| 12 | Differential Clock Negative | | |
| 13 | Differential Data Negative | | |
| 14 | Dual Power | | |
| 15 | Serial Control Input to Transmitter | | |

| DRAWING | qsx_pc88.docx | | |
|----------|---------------|------|------------|
| REVISION | В | | |
| DRAWN | MRE | DATE | 08-22-2018 |
| VERIFIED | DEF | DATE | 08-22-2018 |
| APPROVED | DEF | DATE | 08-22-2018 |

No part of the document may be circulated, quoted, or reproduced for distribution without prior written approval from Quasonix, Inc.

Copyright Quasonix, Inc., All Rights Reserved.