

TRANSMITTER PINOUT CODE ND

Connector: SAMTEC FTSH-108-04-F-D (Bottom)



Pin	Function		
1	LVTTL Serial Control Input to Transmitter		
2	LVTTL Serial Control Reply from Transmitter		
3	No Connection		
4	No Connection		
5	Differential Clock Positive		
6	Differential Data Positive		
7	Serial Control Ground		
8	RF On/Off		
9	No Connection		
10	No Connection		
11	No Connection		
12	No Connection		
13	Differential Clock Negative		
14	Differential Data Negative		
15	DC Power Return		
16	DC Power In		



DRAWING	qsx_pcnd.docx		
REVISION	С		
DRAWN	MRE	DATE	01-29-2019
VERIFIED	J. Schwab	DATE	01-29-2019
APPROVED	DEF	DATE	01-29-2019